

BEFORE INITIAL USE

If you are using the kettle for the first time, it is recommended that you clean your kettle before use with mild soap and water. It is also recommended that you boil a full kettle of water and discard before using.



OPERATION

To fill the Kettle with water remove it from the power base and open the lid by pressing down. The Kettle has minimum (16 Oz) and maximum (60 Oz) marks. Too little water will result in the Kettle switching off before the water has boiled.

NOTES:

- **Do not fill the water over the maximum level, as water may spill out of the spout when boiling.**
- Ensure that the lid is firmly closed before connecting the power cord to the outlet.
- After the lid is securely closed position the Kettle on the power base. Make sure the Kettle is in contact with the power base completely.
- Connect the Kettle to the Power Base. The light at the bottom of the kettle will start with red, move to green and then move to white. The kettle has then completed startup and enters the active state.
- In the active state the Kettle defaults to the initial setting of Boil and waits for the next operation.

WHAT'S IN THE BOX



GETTING TO KNOW YOUR KETTLE



Sur la table

 
DIGITAL KETTLE

WITH **INFUSER**

QUICK START GUIDE



DISPLAY PANEL



Boil **Keep Warm**
Herbal **Black**
Oolong **White**
Green **Delicate**



There are three light indicator modes:

White Light - Kettle is in active state.

Red Light - Kettle is heating.

Green Light - Kettle has completed heating and is in Keep Warm mode.

If the display is off, press the Start/Stop button to enter the active state. The display is a combination of touch buttons and LED lights. There will be a sound prompt every time a button is pressed, and another sound prompt at the end of an operation.

To Switch Between Celsius and Fahrenheit

Press and Hold “+” and “-” at the same time for 3 seconds, until you hear a beep, and the temperature unit will switch between Celsius and Fahrenheit.

To Select a Tea Function

- Press the “+” or “-” buttons

To Start or Stop the Kettle

Start/Stop button will start or stop the operation of the Kettle.

FUNCTIONS

Function	Temperature (°C)	Temperature (°F)	Keep Warm Temperature (°F)	Keep Warm Time (Min)
Boil	100	212	195	60
Herbal	100	212	195	60
Black	100	212	195	60
Oolong	90	195	165	60
White	85	185	165	60
Green	79	175	165	60
Delicate	71	160	140	60

Press the “+” or “-” button in the active state to select a tea function, and then press the Start/Stop button to begin the heating process. The color at the bottom of the kettle will change to red. When the heating process is complete, the color will turn green and move to the Keep Warm state.

When boiling water, the display will show the temperature changes by 1 F or 1 C.

After the selected water temperature has been reached, the sound prompt will beep one time, and the kettle will automatically switch to Keep Warm state.

To stop or pause the heating process, press the Start/Stop button. The Kettle will stop heating and return to the active state, but the chosen tea function will remain selected.

To switch the tea function selection while the water is already heating, press either the “+” or “-” button.

The light will turn white. After 3 seconds, the Kettle will confirm the new selection. The Kettle has a tea selection memory function with uninterrupted power supply.

NOTE: Tea function selection cannot be made in Keep Warm state.

KEEP WARM

After the water temperature of tea reaches the standard temperature, it will be automatically switched to Keep Warm state and with a duration of 60 minutes. To cancel Keep Warm, press the Start/Stop button, and the Kettle will return to the active state.

The light is green in the Keep Warm state.

STANDBY STATE

If there is no operation for 60 seconds, the Kettle will enter a Standby State. After 60 minutes of the Keep Warm state, the Kettle enters the Standby State automatically. In the Standby State, all lights and display are off. When in standby, press any button to go back to active state.

POURING WATER

Lift the Kettle from the power base and then pour the water.

The Kettle may be stored on the power base when not in use.

NOTE: Ensure the lid is firmly closed. The water will spill if the lid is left open during boiling.

NOTE: Operate carefully when pouring the liquid from your Kettle as contact with boiling liquid may result in burns.

NOTE: Ensure power supply is turned off when Kettle is not in use.

BOIL-DRY PROTECTION

Should you accidentally allow the Kettle to operate without water; the boil-dry protection will automatically switch it off. If this should occur, allow the Kettle to cool before filling with cold water and re-boiling.

USING THE INFUSER

Place the infuser into the kettle before starting the heating process. The round edge should face forward (toward spout) and the flat edge will be in the back (toward handle). Secure Infuser into holder within the Kettle to ensure it fits squarely. Using a spoon, carefully add tea leaves, loose tea or tea bags to the tea infuser after the heating process is complete. Securely close the lid. Steep tea according to tea instructions. Tea should steep an average of 4 minutes. Steeping too long will cause the tea to become bitter.

Caution: Use extreme caution when adding tea to the tea infuser. The Kettle becomes very hot during the boiling process. Avoid using fingers or hands directly to add tea to the infuser.

USING THE SPOUT FILTER

The spout filter can be inserted into the spout of the Kettle to filter out any tea leaves. To insert the spout filter, open the lid of the Kettle, and place it in the spout from the inside of the Kettle. To remove it, gently press down on the plastic tab holding it in place and it will release.

NOTE: Never attempt to insert or remove the spout filter while the Kettle is hot as burns can occur. Always wait for the Kettle to fully cool before inserting or removing the spout filter. Make sure to clean the spout filter at regular intervals.